

Interface = RS232




00000 00105 00000

Enter Programming



00000

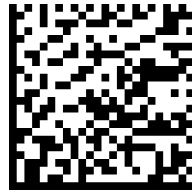

001F01«CR»009B00«CR»002201«CR»002101«CR»004101«CR»020500«CR»00000«CR»

Interface = RS232
Parity = Even
Data Bits = 7
Stop Bits = 2
Flow Control = Enabled
UPC-E to UPC-A = Enabled
Label ID = Disabled

Reboot Gilbarco.