

Magellan 93_94_98xxi Setup Sheet for Logivision POS Using Single USB Cable

Please note: The firmware on your Magellan scanner scale MUST be at version DR9401542 or higher for this sheet to work.


The following Software MUST also be installed onto the computer before these settings will work as needed.

USB COM Driver: https://www.datalogic.com/eng/search.html?search_txt=USB+Com+Driver

Latest OPOS: https://www.datalogic.com/eng/search.html?search_txt=OPOS+drivers

1. Start by scanning the Enter Programming barcode below.

Enter Programming

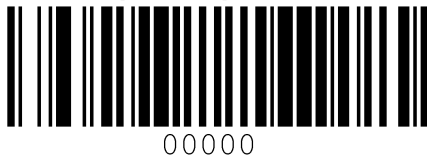

(Make sure the Magellan only beeps once on that code and that the green light on top is flashing before proceeding)

2. **Choose and scan, ONLY ONE** of the two barcodes shown below depending on whether you use a remote scale display or not. (Make sure you cover over the one you're not scanning)

No Display



00011E«CR»040300«CR»031E00«CR»00000«CR»

With Display



00011E«CR»040301«CR»031E00«CR»00000«CR»

OPTIONAL: If you need to reset the Magellan to the default configuration, then scan the barcode below and wait for the scanner to reset.

