


Magellan 93_94_98xxi Setup Sheet for Logivision POS Using Single RS232 Cable

The following Software MUST also be installed onto the computer before these settings will work as needed.

Latest OPOS: https://www.datalogic.com/eng/search.html?search_txt=OPOS+drivers

1. Start by scanning the Enter Programming barcode below.

Enter Programming

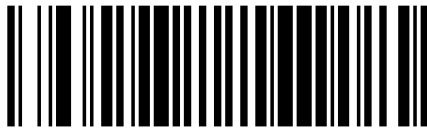

00000

(Make sure the Magellan only beeps once on that code and that the green light on top is flashing before proceeding)

2. **Choose and scan, ONLY ONE** of the two barcodes shown below depending on whether you use a remote scale display or not. *(Make sure you cover over the one you're not using)*

No Display



000120«CR»040300«CR»031E00«CR»00000«CR»

With Display



000120«CR»040301«CR»031E00«CR»00000«CR»

OPTIONAL: If you need to reset the Magellan to the default configuration, then scan the barcode below and wait for the scanner to reset.

Standard Defaults

