

Technical Support

CM968X RESTORE

1. Disconnect the Ethernet cable from the laptop (or the host you are using)

2. Restore Default



3. Configure Ethernet Interface



4. Restart the CM968X still without connecting the Ethernet cable on the host side

5. Restore CM968X Default



6. Restart the CM968X